Activating the Philips Vesta's microphone

This section describes how to activate the built-in microphone of the Philips Vesta (Pro) PC camera.

Make sure the camera's microphone is used for recording

Go to Audio Properties by right-clicking the speaker on your taskbar and selecting Adjust Audio Properties.

Audio Properties 🔗 🔀
Audio
Playback Preferred device: ESS AudioDrive
To select advanced options, click: Advanced Properties
Recording Preferred device: Philips VGA Digital Camera; Aud (Use any available device) Philips VGA Digital Camera; Aud ESS AudioDrive
 ✓ <u>U</u>se only preferred devices. ✓ <u>S</u>how volume control on the taskbar.
OK Cancel Apply

Select **Philips VGA Digital Camera; Aud** as preferred recording device. The checkbox **Use only preferred devices** should be flagged.

Turn up the recording volume

Open the **Volume Control** by double-clicking the speaker on your taskbar. Go to the **Options** menu and select **Properties**.



Select Philips VGA Digital Camera; Aud as mixer device.

Properties		? ×
<u>M</u> ixer device:	Philips VGA Digital Camera; Aud	R
-Adjust volum	ESS AudioDrive Philips VGA Digital Camera; Aud	
C Playback		
Recording	g	
C Other		7
Show the follow	ving volume controls:	
•		Þ
	OK. Car	ncel

After the **Philips VGA Digital Camera; Aud** is selected as the mixer device, click on "recording".

roperties				? ×
<u>M</u> ixer device:	Philips VGA	Digital Cam	era; Aud	
-Adjust volum	ne for			
C Playback	ξ.			
• Recordin	19			
C Other				-
Capture				
•				F
			ок .	Cancel

In the white box, it is shown that the volume control of the Philips camera microphone can be set.

Then click **OK**



Now you can control the recording volume of the camera's microphone. Make sure it is NOT muted (checkbox <u>not</u> flagged). The volume slider should not be fully slided down.